

PROGRAMMING A DIRECTV RECEIVER AND A TV



1. Turn on the device. Slide mode switch to **DIRECTV** or **TV**.
2. Press and hold **SELECT + MUTE** for a few seconds until the **LED** blinks twice.
3. Search the 5 digit code for your DIRECTV receiver on the images below or the TV code on the list provided and enter it:

DIRECTV: _____ **TV:** _____



4. Aim the remote to the device and press **PWR**. The device should turn off. If it does not, repeat steps 2 to 4, trying each code for your brand until you find one that works.



5. If the device turns off, press **SELECT** to lock the code.



Model L - 11 Code 00001

Model L - 12 Code 00001



Model DIRECTV Plus LR - 15 Code 00001



Model DIRECTV Plus LR - 16 Code 00001



Model DIRECTV Plus LHR - 22 Code 00001

SEARCHING FOR YOUR CODE

If your device does not respond to the remote after trying all codes listed for your brand, or if your brand is not listed, try searching for your code. For example, to search for a code for your equipment:



1. Slide the mode switch to **AV1**, **AV2** or **TV**.
2. Press and hold **SELECT + MUTE** for a few seconds until the **LED** blinks twice.
3. Enter **991**. The LED blinks twice.
4. Enter the device ID code: **1** for TV / **2** for DVD and VCR's / **3** for Audio Amp/Tuners.
5. Aim the remote at the TV and press **PWR**. The remote sends IR codes from its library to the selected device, starting with the most popular code first.
6. If the TV responds, go to step 7. If the TV does not respond, press **CH UP**. The remote will try the next code. Continue until the TV responds..
7. To lock in the code, press **SELECT** once. The LED blinks twice.

PROGRAMMING "TV INPUT"



1. Slide the mode switch to **DIRECTV**.
2. Press and hold **SELECT + MUTE** for a few seconds until the LED blinks twice.
3. Enter **960**. The LED blinks twice.

RESETTING THE REMOTE CONTROL



1. Slide the mode switch to **TV**.
2. Press and hold **SELECT + MUTE** for a few seconds until the LED blinks twice.
3. Enter **981**. The LED blinks twice.

SETUP CODES FOR TVs

Admiral	10093, 10463
Aiwa	10701
AOC	10003, 10019, 10030, 10052, 10137, 10185, 11365
BenQ	11032, 11212, 11315
Blue Sky	10556, 11254
CCE	10037, 10217, 10329
Citizen	10030, 10039, 10046, 10056, 10060, 10092, 10186, 10280, 11928, 11935, 20695, 21278
Crown Mustang	10672
CyberHome	10794
DAEWOO	10019, 10039, 10066, 10067, 10091, 10092, 10451, 10623, 10661, 10672, 11661, 11928, 20637, 21278
Emerson	10019, 10038, 10039, 10154, 10158, 10171, 10177, 10178, 10179, 10180, 10181, 10182, 10183, 10185, 10236, 10270, 10280, 10282, 10463, 10623, 11394, 11911, 11928, 11929, 11944, 11963, 20002, 20479, 20593, 20675, 21268, 21278, 21479
Fisher	10154, 10159, 10208
Fujitsu	10179, 10186, 10683, 10809, 10853
GE	10021, 10027, 10029, 10047, 10051, 10055, 10135, 10138, 10174, 10178, 10251, 10279, 10282, 10451, 10747, 11347, 11447, 11917, 11919, 11922, 20240, 20807, 21035, 21060
GOLDSTAR	10001, 10002, 10019, 10030, 10032, 10106, 10178, 10409, 11926, 21237
Grundig	10037, 10070, 10195, 10535, 10672
Harley Davidson	10043, 10179, 11904, 20000
Hewlett Packard	11088, 11089, 11101, 11494, 11502, 11642
HITACHI	10016, 10032, 10038, 10056, 10095, 10097, 10105, 10145, 10151, 10173, 10227, 10279, 10409, 10413, 10577, 10583, 10797, 11045, 11145, 11345, 11445, 11904, 11960, 20000, 21247
Hypson	10264
Hyundai	10849, 11219, 11294
Jensen	10050, 10761, 10815, 10817, 11299, 11933, 21016
JVC	10036, 10053, 10069, 10094, 10160, 10169, 10182, 10463, 10731, 11253, 11302, 11923
Ken Brown	11321
LG	10030, 10056, 10178, 10442, 10700, 10823, 10829, 10856, 11178, 11265, 11325, 11423, 11758, 11993, 21037, 21526
Magnavox	10020, 10024, 10028, 10030, 10036, 10054, 10096, 10179, 10186, 10187, 10230, 10386, 10706, 10802, 11198, 11254, 11365, 11454, 11525, 11904, 11931, 11944, 11963, 11990, 20000, 20593, 21268, 21472, 21781
Matsui	10208
MGA	10019, 10030, 10150, 10155, 10178, 20240

Mitsubishi	10014, 10019, 10093, 10098, 10150, 10155, 10178, 10331, 10358, 10535, 10836, 10868, 11151, 11250, 11392, 11522, 11550, 11917, 20807
Olevia	11144, 11240, 11331, 11610
Optimus	10154, 10166, 10250, 10650, 20162, 20593, 21162, 21262
PANASONIC	10051, 10055, 10162, 10226, 10250, 10338, 10375, 10650, 11291, 11310, 11410, 11480, 11510, 11919, 11941, 11946, 11947, 20162, 21035, 21162, 21262, 21490
Philco	10019, 10020, 10028, 10030, 10054, 10096, 10145, 10302, 10463, 10786, 11029, 11661, 11911, 20479
PHILIPS	10012, 10013, 10037, 10054, 10556, 10690, 11154, 11454, 11483, 11961, 20854, 21260
Pioneer	10038, 10166, 10172, 10679, 10866, 11260, 11398
Proview	10835, 11401, 11498
RCA	10018, 10019, 10029, 10038, 10047, 10060, 10090, 10135, 10174, 10278, 10618, 10679, 10747, 11047, 11147, 11247, 11347, 11447, 11547, 11917, 11919, 11922, 11948, 11953, 11958, 12002, 20240, 20807, 21013, 21022, 21035, 21060, 21193
SAMSUNG	10019, 10030, 10032, 10037, 10056, 10060, 10178, 10264, 10329, 10408, 10408, 10427, 10482, 10618, 10702, 10766, 10812, 10814, 11060, 11249, 11312, 11395, 11575, 11903, 11959, 20432, 20899, 21014
SANYO	10088, 10107, 10146, 10154, 10159, 10208, 10232, 10339, 10484, 10799, 10893, 11142, 20240
SHARP	10039, 10093, 10153, 10157, 10165, 10220, 10281, 10386, 10398, 10491, 10688, 10689, 10818, 10851, 11393, 11602, 11917
SONY	10000, 10010, 10011, 10080, 10111, 10273, 10353, 10505, 10810, 10834, 11100, 11317, 11685, 11904, 11925, 20000, 21232
Telefunken	10005, 10056, 10074, 10702
TOSHIBA	10036, 10060, 10070, 10093, 10149, 10154, 10156, 10650, 10822, 10832, 10845, 11156, 11164, 11256, 11265, 11306, 11325, 11343, 11356, 11369, 11524, 11635, 11656, 11704, 11918, 11935, 11936, 11945, 12006, 20695, 20845, 21145
Vizio	10864, 10885, 11499, 11756, 11758
White Westinghouse	10463, 10623, 20637
Yamaha	10019, 10030, 10769, 10797, 10833, 10839, 11526
ZENITH	10016, 10017, 10092, 10178, 10463, 11265, 11904, 11911, 11929, 20000, 20479, 20637, 21479

NOTE: Some TV brands not listed here may not be able to be programmed to the DIRECTV universal remote control. Both the DIRECTV remote and the TV remote may have to be used in cases like these.