



# REMOTE REFERENCE FIND OUT WHAT THE BUTTONS ON YOUR REMOTE DO.

## EQUIPMENT CONTROLS

- MODE SWITCH**  
Changes remote mode to control other equipment. Left position controls the DIRECTV® Receiver. (Other equipment must be programmed individually.)
- TV INPUT**  
Press to see signals cycle through to your TV from the DVD player or other equipment.
- FORMAT**  
Cycles through HD resolutions and screen format options. This button only works if you have DIRECTV® HD services.



- POWER**  
Turns on/off whichever equipment the MODE switch is set to. (Turning off receiver before TV may display a gray or black screen.)
- TV POWER ON/OFF**  
Turns both your DIRECTV® Receiver and TV on/off at the same time. (Remote must be programmed for your TV to use this function. DVR receiver still records when off.)

## DVR CONTROLS

- STOP**  
While viewing recorded programs, stops playback.
- REPLAY**  
Jumps back six seconds. Hold down to jump back to the beginning.
- REWIND**  
Press up to four times to rewind at increasing speeds.
- PAUSE**  
Pauses current video.
- DASH**  
Press twice to delete recorded shows from your list.



- ADVANCE**  
Jumps ahead 30 seconds. Hold down to jump forward to the end.
- PLAY**  
Play current video. Hold down for slow motion.
- FAST FORWARD**  
Press up to four times to fast-forward at increasing speeds.
- RECORD**  
Press once to record program or the program highlighted in the Channel Guide. Press twice to automatically record a series.

## NAVIGATION CONTROLS

- ACTIVE**  
Displays the DIRECTV Active™ channel—local weather and more.
- GUIDE**  
Press twice to see programming grouped into categories. Press once to see the On-Screen Guide.
- SELECT**  
Selects the highlighted item.
- BACK**  
Takes you to the previous menu screen.
- MENU**  
Brings up the Quick Menu.



- LIST**  
Displays your recorded programs.
- EXIT**  
Exits the menu and returns to last channel viewed.
- ARROWS**  
To move around (up, down, left, right) within a menu.
- INFORMATION**  
Displays information about the program you are watching or what is highlighted in the On-Screen Guide.
- CHANNEL/PAGE**  
Changes TV channels. Scroll a full page while viewing the Guide.
- PREVIOUS**  
Returns or switches to last channel viewed.

## INTERACTIVE CONTROLS

- RED**  
While viewing the Guide, jumps 12 hours back.
- GREEN**  
While viewing the Guide, jumps 12 hours forward.



- BLUE**  
While viewing full-screen TV, displays the Mini Guide.
- YELLOW**  
While viewing the Guide, displays various Guide Options.

Other functions vary. Look for on-screen hints.